

## Intertherm ARYMHR Series Installation Instructions

- 1) Locate Yellow Compressor wire on the Compressor and follow to electrical box Run Capacitor “**C**” terminal. Disconnect and splice Yellow wire connection to the Brown ICM soft start wire.
- 2) Connect Red ICM soft start wire to the location of the previous Yellow Compressor wire terminal on the Run Capacitor “**C**” terminal.
- 3) Locate Start Capacitor and Disconnect the Red and Yellow (or White) wires coming from the Start Capacitor.
  - a. The ICM soft start effectively replaces the Start Capacitor, allowing for the total removal of the Start Capacitor. Though it is not entirely necessary.
- 4) Connect Blue soft start wire to the “**H**” terminal on the Run Capacitor.
- 5) Locate the 3<sup>rd</sup> wire coming out of the Compressor overload switch (may be Blue or Black), route and 3-way splice the final Black soft start wire to a convenient location along the Compressor’s (Blue or Black) wire.